Starter button and emergency cutout High beam tell tale Headlight: d Neutral indicator

Component key - 1983 to 1984 R80RT and 1981 on R100, R100CS, R100RT, R100RS models

а	Flasher relay	e Battery charge indicator
þ	Hìgh beam	f Oil pressure light
С	Low beam	g Indicator repeater
d	Parking light	16 Rear stoplight switch
е	Light relay	17 Starter relay
f	Ignition/light switch (R100, R100CS)	18 Ignition coils
	Contact board with france	10.0-1-1

	e Light relay	17 Starter relay
	f Ignition/light switch (R100, R100CS)	18 Ignition coils
	g Contact board with fuses	19 Spark plugs and caps
3	Ignition/light switch (R100RS, RT)	20 Ignition trigger
4	Dip switch, headlight flasher and horn button	21 Starter motor
5	Running light (R100RS, RT)	22 Battery
6	6-pin connector (R100RS, RT)	23 Alternator
7	Front RH indicator	24 Regulator
8	Voltmeter	25 Diode board (rectifier)

0.00	zip biritory meaning and members	-	Clartor motor
5	Running light (R100RS, RT)	22	Battery
6	6-pin connector (R100RS, RT)	23	Alternator
7	Front RH indicator	24	Regulator
8	Voltmeter	25	Diode board (rectifier)
9	Clock	26	6-pin connector
10	Clutch switch	27	Oil pressure switch
11	Front LH indicator	28	Neutral switch
12	Left horn	29	Rear RH indicator
13	Right horn (R100RS, RT)	30	Rear light:

10	Clutch switch 27	Oi	l pressure switch
11	Front LH indicator 28	Ne	eutral switch
12	Left horn 29	Rε	ear RH indicator
13	Right horn (R100RS, RT) 30	Re	ear light:
14	Front stoplight switch	а	Rear and licence plate light
15	Combined instrument:	b	Brake light

31 Rear LH indicator

32 TCI unit

Speedometer light

Revolution counter light